

01-05 Lexus KEY/REMOTE PROGRAMMING INSTRUCTIONS

Key Transponder Programming

(Programming additional Keys)

1. Insert an already programmed master key into the ignition. Do not turn.
2. Press and release the gas pedal 5 times.
3. Press and release the brake pedal 6 times.
4. Remove the key from the ignition.
5. Insert the new key you want to program into the ignition.
6. Press and release the gas pedal one time.
7. Wait 1 minute. The security light will be blinking for this one minute. When it stops blinking your key is programmed.
8. Repeat steps 5-7 for each additional key.
9. To end programming step on the brake one time.

To Program an additional Valet key

1. Insert an already programmed master key into the ignition. Do not turn.
2. Press and release the gas pedal 4 times.
3. Press and release the brake pedal 5 times.
4. FOLLOW STEPS 4-9 ABOVE

To DELETE pre existing keys and program a new master key

1. Insert an already programmed master key into the ignition. Do not turn.
2. Press and release the gas pedal 6 times.
3. Press and release the brake pedal 7 times.
4. Remove the key from the ignition.
5. Insert the new key you want to program into the ignition.
6. Press and release the gas pedal one time.
7. Wait 1 minute. The security light will be blinking for this one minute. When it stops blinking your key is programmed.
8. To end programming step on the brake one time.

Note: Look for your security light. This light will guide you during the programming procedure. The security light will go off at Step 1. It will remain off until Step 6. The security light will come on and start blinking after Step 6 until the key is programmed. If the security light comes on after Step 4 STOP the procedure and start over again. If you perform this procedure too slowly your car will not go into programming mode. If you cannot get your car to go into programming mode make sure you are using a master key and not a valet key.

01-05 Lexus KEY/REMOTE PROGRAMMING INSTRUCTIONS

Remote Programming

(Programming the remote lock/unlock fob)

1. Close and lock all doors. Unlock and open the driver's door.
2. Put the key into the ignition and remove. Do not turn it on.
3. Using the electric lock switch, or the manual lock lever on the driver's door, Lock and unlock 5 times. (Lock, Unlock, Lock, Unlock, Lock, Unlock, Lock, Unlock, Lock, Unlock)
4. Close and open the driver's door.
5. Repeat step 3
6. Put the key into ignition. Turn to "ON", turn off and remove.
7. You will see the door locks cycle by themselves.

If the door locks do not cycle (lock, unlock) by themselves then the car isn't in programming mode and you must start over.

8. On the remote, press and hold the Lock and Unlock buttons at the same time for no more than 2 seconds.
9. On the remote, press the Lock button for no more than 1 second.

AT THIS POINT. The locks should cycle by themselves ONE time. This means the procedure was accepted.

If the locks cycle TWICE programming has failed.

The most common reason for programming failure is because the door lock actuators have gotten weak. To fix this, manually move the lock lever on the driver's door during steps 3 and 5.

As long as the car is still in programming mode you can keep trying step 8 and 9 until you complete the programming. If you wait too long and the car exits the programming mode then you must start over. After you get the remote to program then continue on with step 10.

10. Close and open door to end programming procedure.